


MANUAL IZE LED TAIL LIGHT 1 FUNCTION LED

BLUE = - TO CHASSIS GROUND **BROWN** = REVERSE LIGHT

- 1. Read all instructions carefully and study diagrams before installing lights.
- 2. Check with state and local authorities for laws governing usage and proper mounting of tail lights.
- **3.** Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
- 4. When running wires through the firewall, keep them away from moving parts.

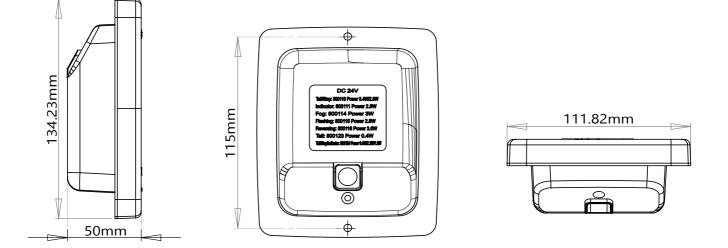

WARNING!

- 1. Work under the specified voltage (DC24V).
- 2. Don't cut the cable shorter then 0,5m.
- **3.** This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

Part no. 800116

Contact us if you need support: support@strands.se or +46(0)320-450450

