


MANUAL


IZE LED TAIL LIGHT 1 FUNCTION LED

 
BLUE = - TO CHASSIS GROUND

BROWN = INDICATOR

- 1. Read all instructions carefully and study diagrams before installing lights.
- 2. Check with state and local authorities for laws governing usage and proper mounting of tail lights.
- **3.** Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
- 4. When running wires through the firewall, keep them away from moving parts.

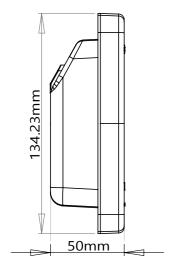

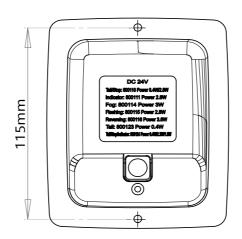



WARNING!

- 1. Work under the specified voltage (DC24V).
- 2. Don't cut the cable shorter then 0,5m.
- **3.** This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

Part no. 800111