

muck-truck



It doesn't cost the earth to move it!

***BATTERY OPERATED
PEDESTRIAN DUMPER***

***OWNERS & OPERATIONS
INSTRUCTION MANUAL***

CONGRATULATIONS!!

And thank you for purchasing a new ETruck.

We have done our utmost to ensure your E Truck will be the most trouble free and productive machine you will ever use. Please read the operators manual carefully before using your E Truck.

If you would like help or have any questions
Please have the following relevant information before you call us

Date of purchase:

Serial number:

Dealer/Distributors name:

CERTIFICATE OF CONFORMITY

THE UNDERSIGNED MUCK-TRUCK UK LTD.
WE DECLARE THAT THE BATTERY OPERATED PEDESTRIAN DUMPER TRUCK

CATEGORY..... BATTERY POWERED – PEDESTRIAN DUMPER
MODELE TRUCK.

CONFORMS WITH THE ESSENTIAL HEALTH & SAFETY REQUIREMENTS OF THE EEC DIRECTIVE 2006/42/EC; ELECTROMAGNETIC COMPATIBILITY DIRECTIVE 2004/108/EC; LOW VOLTAGE DIRECTIVE 2006/95/EC; SAFETY OF MACHINERY EN ISO 12100-1:2003 + A1:2009; MECHANICAL VIBRATION ISO 5349 AND ASSOCIATED HARMONISED STANDARDS, WHERE APPLICABLE. NOISE EMISSIONS CONFORM TO DIRECTIVE 2005/88/EC AMENDED BY 219/2009 FOR MACHINES UNDER ARTICLE 12. THE NOTIFIED BODY IS AV TECHNOLOGY LIMITED, AVTECH HOUSE, BIRDHALL LANE, CHEADLE HEATH, STOCKPORT, SK3 0XX, ENGLAND.

H.A.V.s

Left hand - XXX m/s²

Right hand - XXX m/s²

YEAR OF MANUFACTURE – 2018

NAME & SIGNATURE OF TECHNICAL MANAGER MUCK TRUCK UK LTD.



Terry Rowlands

NOTES

NOTES

HINTS FOR SAFE OPERATION

- DO** Study this manual before operating your E Truck.
- DO** Check all nuts, bolts, and wheel studs weekly.
- DO** Be safety conscious and dress appropriately when operating your **E Truck**. Always wear substantial footwear and a hard hat in relevant areas.
- DO** Exercise extreme caution with the controls when working on steep or slippery surfaces. Especially, when people are near to the working area.
- DO** Ensure that all safety guards are in place when operating the **E Truck**

ATTENTION

- DO** Keep the E Truck free of any accumulation of dirt, grease, oil or other flammable material.
- DO** After use, connect the truck to the supplied battery charger. The battery charger should be left powered up and connected to the E Truck until the E Truck is next used. This will ensure that the batteries are fully charged when the truck is next to be used.
Note that there is an inhibit on the drive motor whilst the battery charger is plugged into the E Truck socket.

BE SAFE: FOLLOW INSTRUCTIONS AT ALL TIMES.

SAFETY

- DO NOT** Allow anyone lacking in experience to operate your E Truck.
- DO NOT** Carry “passengers” on your E Truck.
- DO NOT** Start work without completing the daily maintenance checks.
- DO NOT** Operate the E Truck without exercising appropriate safety precautions.
- DO NOT** Use other types of battery charger or batteries.

ATTENTION

DO NOT Pressure wash directly onto the trucks electronics.

BE SAFE: EXERCISE COMMON SENSE AT ALL TIMES.

OPERATING INSTRUCTIONS:

GETTING STARTED:

1. Using the battery charger supplied, charge the batteries until the green, "ready" light on the charger comes on.

TO MOVE FORWARD:

1. Switch the on/off button to ON. The switch will illuminate.
2. Select "FORWARD" on the rocker switch on the electrical box.
3. Grip the handlebars and pull up on the left hand lever. The parking brake will be automatically released and the E Truck will start to move. The more the lever is raised, the faster the E Truck will move.

TO REVERSE:

1. Release the left hand throttle lever to stop the E Truck.
2. Move the rocker switch to "REVERSE".
3. Grip the handlebars and pull up on the left hand lever. The more the lever is raised, the faster the E Truck will move.

TO STOP:

Release the throttle lever. The E Truck will slow down and stop. After a short delay the parking brake will automatically come on.

After 10 minutes of inactivity, the controller will power down. The on/off switch must be pushed to off and back on again to activate the truck.

WARRANTY

E Truck SERIAL No –

12 Calendar months from date of sale for Consumers.

90 Days for units used in the Commercial sector.

Under the following conditions

- Routine maintenance undertaken in accordance with Owners Manual.
- Returned defective parts are approved by muck-truck UK Ltd.
- Machine is not abused or operated with known faults or lack of maintenance.
- Repairs are in accordance with muck-truck UK Ltd.

AT AN AGREED JOB RATE

Only defective parts are covered & not wearable components that necessitate replacement through normal wear & tear, i.e. puncture, chipped paint, dented hopper etc. muck-truck UK Ltd will not be held liable for any consequential losses.

PERSONAL CUSTOMER GUARANTEE STATEMENT

If there is any component, or components, manufactured by muck-truck UK Ltd that are found to be defective within 12 months from the date of purchase (or 90 days in the case of a machine used for hire/commercial purposes), muck-truck UK Ltd undertake to replace the faulty component/s free of charge, (provided that they are notified immediately upon date of failure).

THE FOLLOWING ARE NOT COVERED BY THIS GUARANTEE

1. A machine which has been subject to operation in excess of recommended capacities, misuse, negligence or accident, or has been altered or modified in a manner which has not been authorised by muck-truck UK Ltd.
2. Wear parts, e.g. tyres, cables, batteries etc.
3. Transportation Charge – to and from the warranty repair site.

muck-truck UK Ltd operates a policy of continual development and reserves the right to alter product specification without giving prior notice.

SPARE PARTS LIST

Part No.	Description	Part No.	Description
TEV12360A	Battery	MT 14020	Electrical Box
DP03	Handle Bar Grip		
PG D51175	Speed Controller	MT 14008	Skip Release
DP18	Spring - Throttle/Skip Catch	MT 03769	6 cu ft skip
S21136D109	Transaxle	MT 14001	Mainframe
DP24	10" Wheel Complete	MT 14018	Throttle Lever Plate
PG D50826	Trucharge Gauge	MT 14009	Powerdrive Bracket
DP31	Lynch Pin	MT xxxxxx	Throttle Wire
MT 14025	Electrical Box Decal	PB8	Curtis Potbox
MT 14024	Top Decal	MT 03943	Throttle/Skip Catch Cable
DP45	4" Wheel	DP0502014	Throttle/Skip Catch lever
RS 507 306	Rocker Switch Top	RS 2508954040	Charging Plug
RS 507 390	Rocker Switch	RS 2508952173	Charging Socket
DP83	19mm Star lock	MT 03757	Handlebar
MT 03861	Wheel Hub		
1935.3133	ON/OFF Switch		
MT 14010	Cowling L.H.	MT 03764	Battery Cover
MT 14013	Cowling Top	MT 14022	Wiring Diagram
MT 14011	Cowling R.H.	EE24/5 or 24/8	Elite 24V Battery Charger

Tyre Pressures

Front Wheel 30 psi

Middle Wheel 30 psi

Rear Wheel 30 psi

TO EMPTY SKIP:

1. Stop the machine and disengage the skip release lever.
2. Jerk both handles upwards; the skip will pivot forward and dump the load with gravity force.

TO RESET SKIP:

Pull back on the skip and engage the locking catch that holds the skip closed.

NOTE: Check that the locking catch has engaged before moving off.


MAINTENANCE

Routine checks of your **E Truck** will ensure trouble free operation with less 'down' time.

Component	Daily	Weekly
State of battery charge	✓	
Control Cables	✓	
Condition of wiring		✓
Tyre Pressure		✓
All Nuts/Bolts		✓

Remember – A daily check takes only minutes but could save you hours.
Be Proud – look after your **E Truck**.

TO ADJUST THE CONTROL CABLES

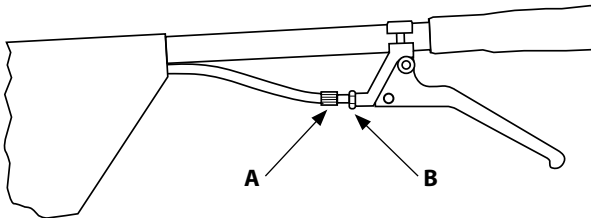

LOOSEN 8mm NUT "B"
TURN ADJUSTER "A" COUNTER CLOCKWISE TO TIGHTEN
THE CABLE. RETIGHTEN NUT "B"

**muck-truck USA LLC
2691 SW Domina Road
Port Saint Lucie
Florida 34953
USA**

Tel: 772 621 3951

FAX: 772 621 3817

www.mucktruckamerica.com

E-Mail: sales@mucktruckamerica.com



**muck-truck UK Limited
27D Pennygillam Way
Pennygillam Industrial Estate
Launceston
PL15 7ED**

United Kingdom

Tel: 01566 777140

FAX: 01566 777706

www.mucktruck.com

E-Mail: info@mucktruck.co.uk